

INSTALLATION & CLEANING INSTRUCTIONS

Hyosung Avitar (2006-2008) Model# 111 & S111

Item Description	QTY
Mounting Bracket	2
10/32 Threaded Mounting Spool	4
7/8 x 1" x 10/32 Aluminum Spacer	2
7/8 x 1 5/8 x 10/32 Aluminum Spacer	2
10/32 x 1 1/2" Flat Socket Head Cap Screw	2
10/32 x 2 1/4" Flat Socket Head Cap Screw	2
Silicone	1

Mounting Bracket Assembly

- Refer to Figure 1
- Brackets are marked left and right.
- Install 10/32 x 2 1/4" Flat Socket Head Cap Screw, 7/8" x 1 5/8" x 10/32" Aluminum Spacer and New 10/32" Threaded Mounting spool in the Front Hole of the Bracket.
- Install 10/32 x 1 1/2" Flat Socket Head Cap Screw, 7/8" x 1" x 10/32" Aluminum Spacer and New 10/32" Threaded Mounting Spool in the Rear Hole of the Bracket.
- Repeat Procedure on opposite Bracket.

SADDLEBAG INSTALLATION PROCEDURE

NOTE: Refer to Figure 2.

- 1.) Remove the Fender Strut Assembly on one side.
- 2.) Place Mounting Bracket on the Outside of the Fender on top of existing Rubber Bushings.
- 3.) Use Factory Bolts to reassemble Mounting Bracket and Fender Strut Assembly.
- 4.) Mount Saddlebags over spools on bracket on each side of motorcycle and secure with clips retained inside bags as seen in Figure 3.
 - Saddlebags will be easier to mount if a small amount of silicone lubricant is used on the rubber mounting points.
 - Inspect each clip to verify that they are properly seated in retaining groove. See view "A".

SADDLEBAG CARE INSTRUCTIONS


- Do not exceed 20 lbs. per saddlebag this includes sitting or standing on bags, it is a common occurrence for a non-rider to attempt to sit on bags, this also may void warranty.
- Periodically, apply a small amount of silicone lubrication to rubber mounting points. Saddlebags will be easier to mount and remove.

- Remove grease, oil or mud with mild detergent and water. For fast touch-up, *Windex* or Turtle wax formula F-21 will restore original luster. The use of any other chemicals may discolor the saddlebags.
- Whenever possible, release locks on saddlebag lids to allow the gaskets to expand during storage.
- If you use bags to ice down drinks, later remove bags, drain water and blot up excess water. The foam interior lining is closed-cell foam and does not retain water. Leave lids open until interiors are dry.
- Use white *Scotch Brite* scour pad (ultra-fine, only) to remove scratches & shiny spots and restore luster. This can be purchased at an automotive supply store.
- When locking or unlocking saddlebags, place one hand on top of bag near lock and apply a moderate amount of pressure while turning the key. This compresses the weather-seal enabling the locking mechanism to turn freely.
- Always inspect to verify each of the saddlebag mounting clips on inside of bag is properly installed when mounting bags. Clips fit into groove on mounting spool. Failure to perform this correctly can cause severe damage and may void warranty.

MOUNTING BRACKET ASSEMBLY MODEL 111 & S111

Figure 1


FRONT

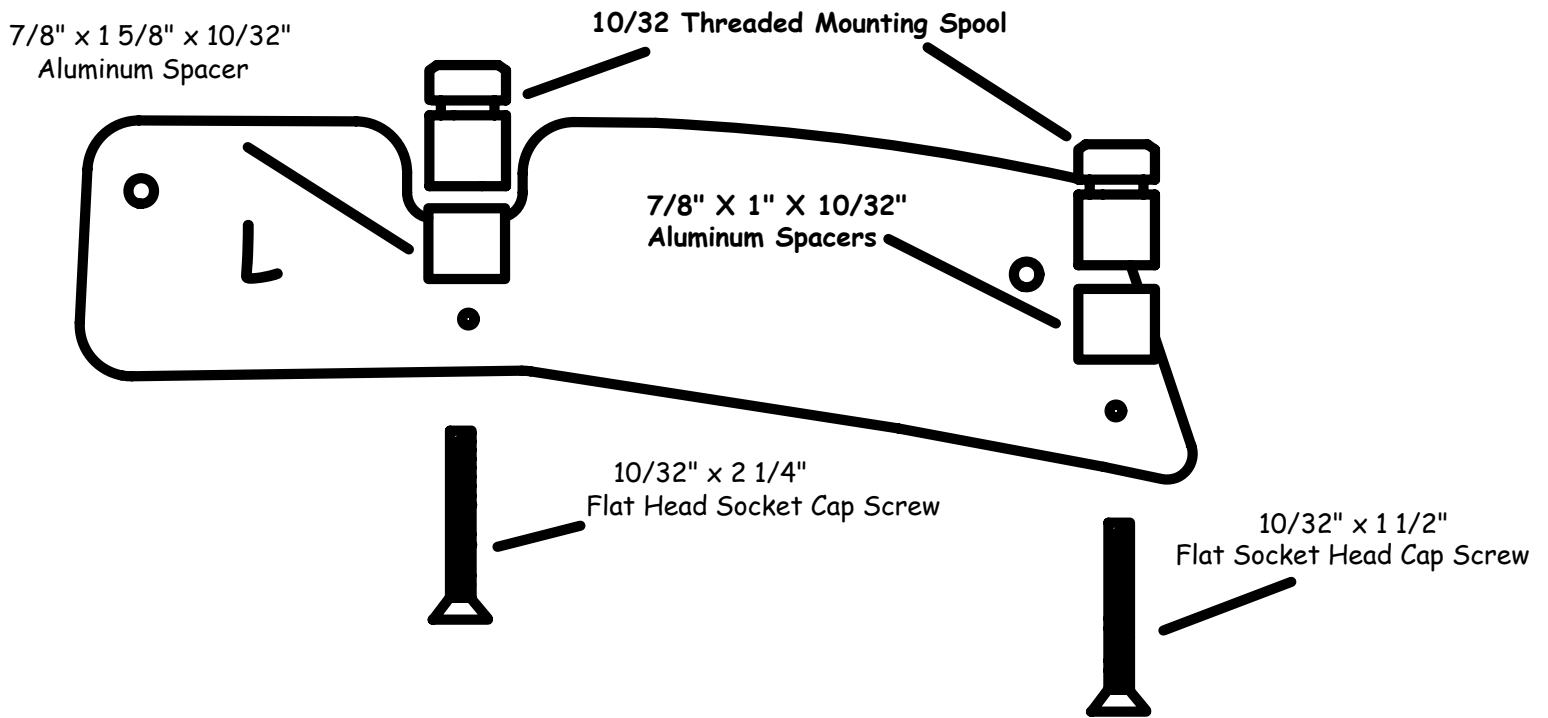

04/13/09

MOUNTING BRACKET INSTALLATION
MODEL# 111 & S111
Figure 2

Insert bracket between fender strut and fender.

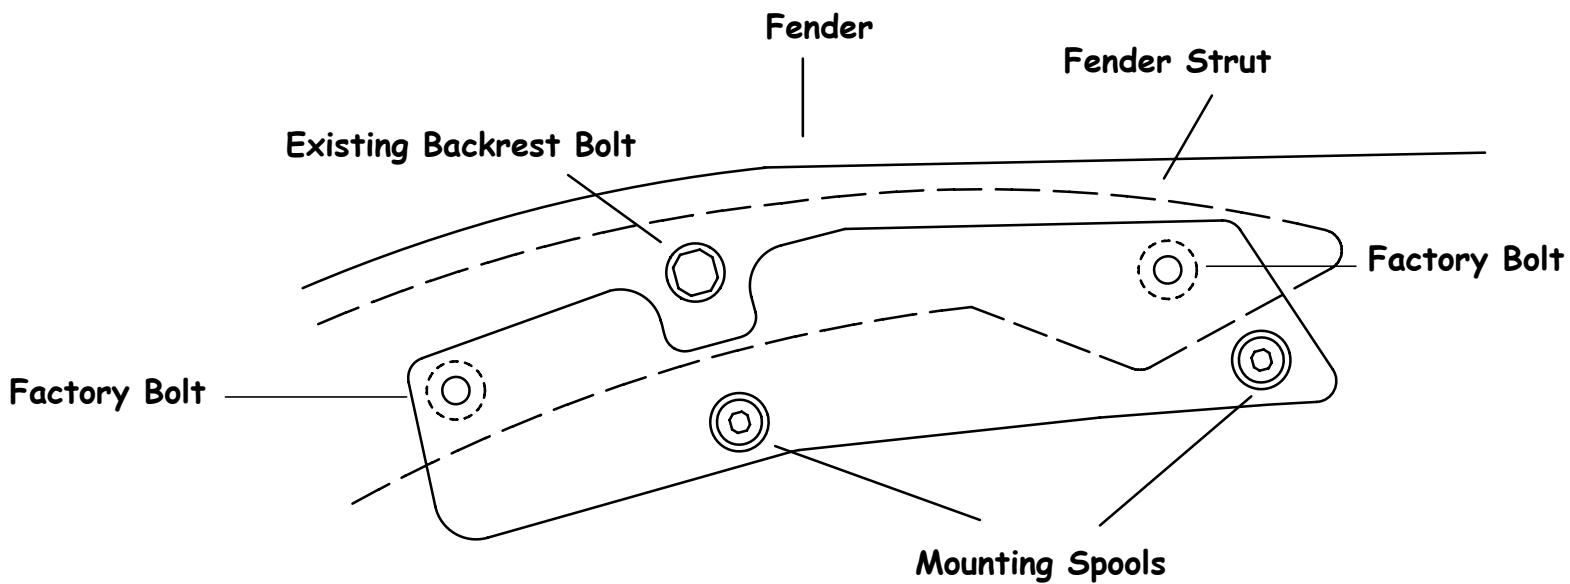

04/14/09

INSTALLATION INSTRUCTIONS ***HYOSUNG AVITAR (2006-2008)*** ***MODEL # 111 & S111***

Figure 3

← **FRONT**

