

INSTALLATION & CLEANING INSTRUCTIONS
YAMAHA ROADLINER
MODEL# 626 & S626

PARTS INVENTORY

Item	Quantity
8 x 65 MM HEX SPOOL BOLT ASSEMBLY	2
8 x 55 MM HEX SPOOL BOLT ASSEMBLY	2
17 X 15 X 8MM ALUMINUM SPACER	4
SUPPORT BRACKET ASSEMBLY	2
SILICONE	1

SADDLEBAG INSTALLATION

1. Refer to Figure 1.

Information: This procedure should only be done one side at a time.

2. Remove the two rear bolts on right side fender strut holding the fender. Loosen the three front bolts from the fender strut. (Do not remove.) Pull the fender strut away from the fender to allow the mounting bracket to slide in between the fender and the strut.
3. Slide support bracket between fender and fender strut until support bracket holes are lined up with fender strut holes. Rubber bumpers will point out.
4. Install the 8 x 65 mm hex spool bolt assembly and 17 x 15 x 8mm aluminum spacer in the front hole and the 8 x 55 mm hex spool bolt assembly and 17 x 15 x 8mm aluminum spacer into the rear hole.
5. Repeat procedure for left side.

Information: Bags will be easier to mount and remove if a small amount of silicone lubrication is applied to rubber mounting points.

6. Mount saddlebags over spools on fender mount and secure with clips retained inside bags.
7. Tighten all mounting bolts.

8. Inspect each clip to verify each clip is properly seated in retaining groove. See View "A".

SADDLEBAG CARE INSTRUCTIONS


- Do not exceed 20 lbs. per saddlebag this includes sitting or standing on bags, it is a common occurrence for a non-rider to attempt to sit on bags, this also may void warranty.
- Periodically, apply a small amount of silicone lubrication to rubber mounting points. Saddlebags will be easier to mount and remove.
- Remove grease, oil or mud with mild detergent and water. For fast touch-up, *Windex* or *Turtle Wax F-21* will restore original luster. The use of any other chemicals may discolor the saddlebags.
- Whenever possible, release locks on saddlebag lids to allow the gaskets to expand during storage.
- If you use bags to ice down drinks, later remove bags, drain water and blot up excess water. The foam interior lining is closed-cell foam and does not retain water. Leave lids open until interiors are dry.
- Use white *Scotch Brite* scour pad (ultra-fine, only) to remove scratches & shiny spots and restore luster. This can be purchased at an automotive supply store.
- When locking or unlocking saddlebags, place one hand on top of bag near lock and apply a moderate amount of pressure while turning the key. This compresses the weather-seal enabling the locking mechanism to turn freely.
- Always inspect to verify each of the saddlebag mounting clips on inside of bag is properly installed when mounting bags. Clips fit into groove on mounting spool. Failure to perform this correctly can cause severe damage and may void warranty.

INSTALLATION INSTRUCTIONS

YAMAHA ROADLINER

MODEL # 626 & S626

← FRONT

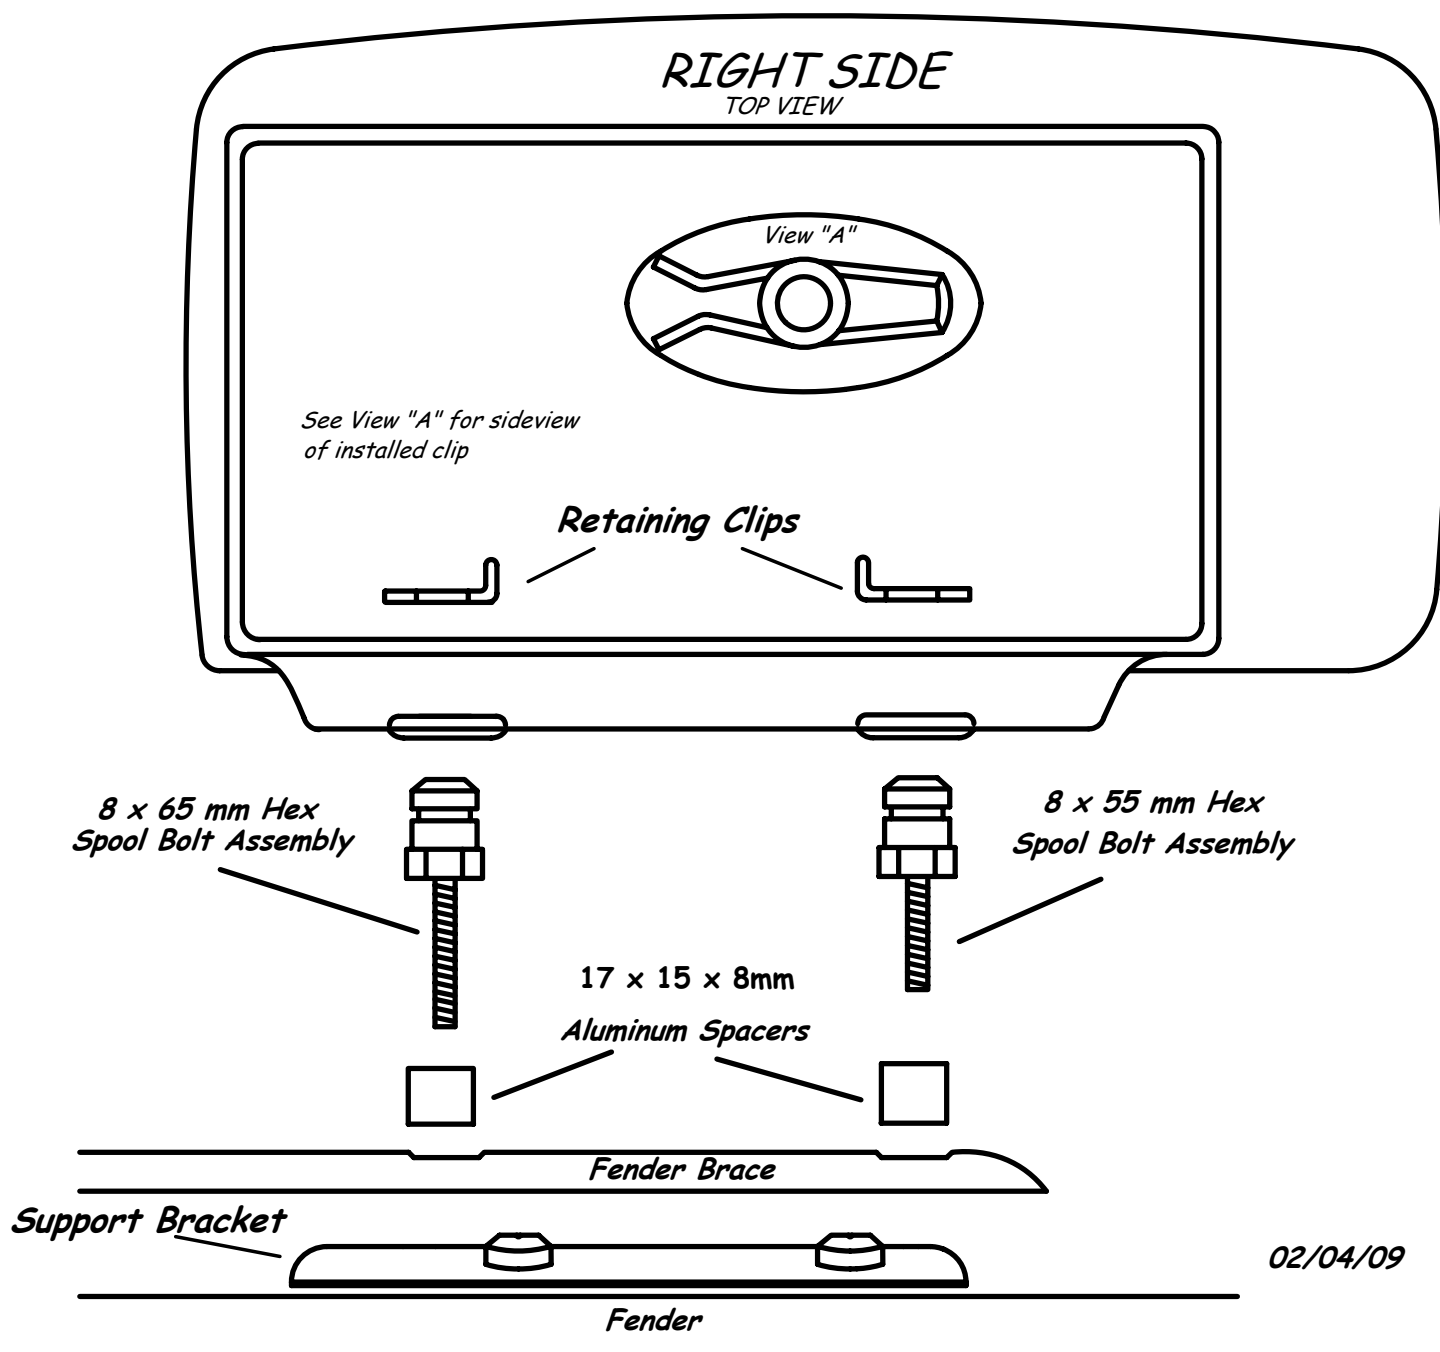

02/04/09